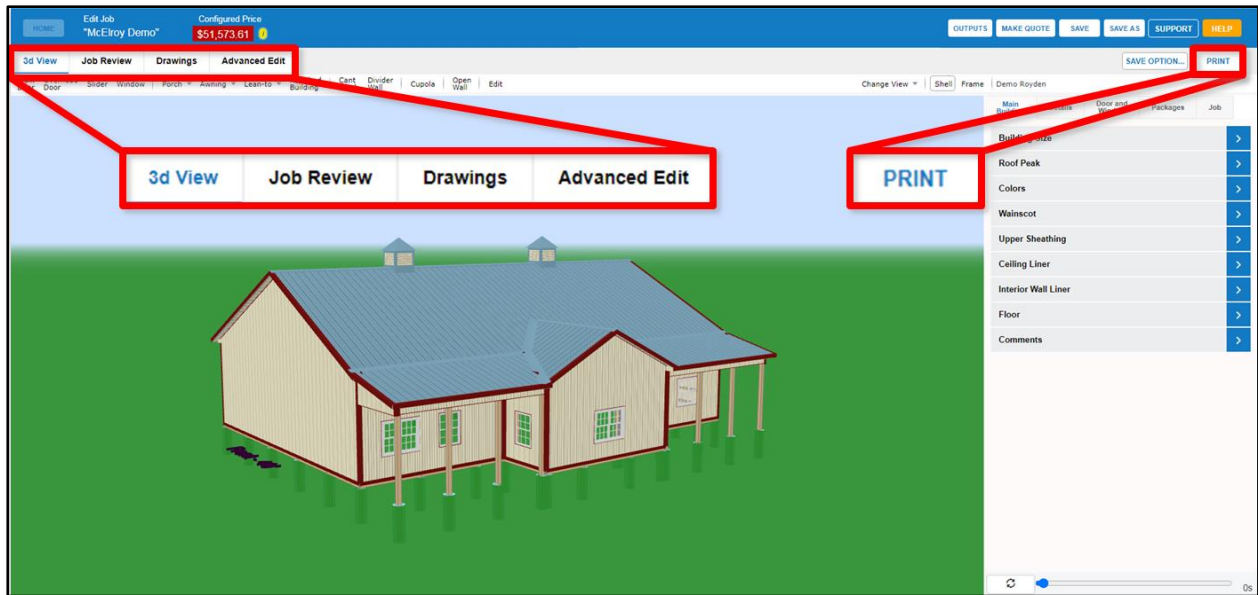


---

# Printing the Contents of the Display Pane

---

Not to be confused with SmartBuild's *Outputs*, the `PRINT` button is used to download a PDF document that contains the current contents of the *Display Pane* on the *Edit Job*, *Prep Job* and *View Job* pages. This button is available in all four *Modes* (*3D View*, *Job Review*, *Drawings* and *Advanced Edit*), and is located near the top-right side of your screen, as shown in Figure 1 below. The contents of the *Display Pane* will of course differ, depending on the *Mode* that is currently selected.



**Figure 1:** The `PRINT` button is located near the top-right side of your screen, regardless of the *Mode* that is currently selected.

Generally speaking, the `PRINT` command is used for a three basic purposes:

1. It is the only way to download a copy of your 3D model — shell or frame — as viewed from any angle. Scroll and zoom your model to the desired perspective and size. When you click on the `PRINT` button, the resulting PDF will contain your model exactly as it is displayed on your screen.
2. You may wish to download a subset of the information contained in one of your *Outputs*. For example, you may want to download the assembly drawing for a single roof plane, rather than a comprehensive set of assembly drawings for all roof planes.
3. You may wish to download a document in PDF format rather than a different format provided in your *Outputs*. For example, you may want to download your *Materials List* in PDF format rather than as an Excel file, so that the finalized contents cannot be edited by another party.

To download a copy of your *Display Pane's* contents, simply click on the `PRINT` button. The resulting PDF file will be downloaded automatically, to be printed or saved as you see fit.